



© Copyright 2007 BEHRINGER International GmbH

Behringer BCD3000 & BCD2000



[1] No MIDI function	[13] FREE	[25] Layer Mix mode UP
[2] FREE	[14] FREE	[26] Layer Mix mode DOWN
[3] No MIDI function	[15] No MIDI function	[27] Crossfader Skip A / Skip B
[4] Cue List open / close	[16] FREE	[28] Master Fader or Audio Level
[5] Color RED for Color Filter or Color-fade (see [11] & [12])	[17] Autofade	[29] Audio or Cue List Play/ Stop
[6] Color GREEN for Color Filter or Color-fade (see [11] & [12])	[18] No MIDI function	[30] Add Storage Place to Cue List
[7] Color BLUE for Color Filter or Color-fade (see [11] & [12])	[19] POWER LED / NO MIDI function	[31] Layer UP / DOWN
[8] Color WHITE for Color Filter or Color-fade (see [11] & [12])	[20] Crossfader	[32] Storage speed (Speed Master)
[9] Fade type DOWN	[21] Fade time	[33] Storage Place UP / DOWN
[10] Fade type UP	[22] FREE	[34] + [35] Submaster Storage
[11] Switch to Color Filter mode (Default mode)	[23] GO / Back Cue List	[34] + [35] Submaster Layer
[12] Switch to Color-fade mode	[24] Play / Stop Cue List	[34] + [35] Opacity Layer